



SMART FILM CLEANING INSTRUCTIONS

How to Clean Smart Film

Keep your switchable privacy film crystal clear.



! This guide is for smart film only, not regular window film.

THE SHORT ANSWER



Clean smart film only with a soft microfiber cloth and 99% isopropyl alcohol. Put the alcohol on the cloth, wipe gently in light, straight strokes, then dry with a second clean cloth.



2 supplies

Alcohol and microfiber



5 minutes

Four simple steps



Warranty-safe

Follow the steps

WHAT YOU NEED

Two supplies. That is all.



CLEANING LIQUID

MaxTite 99.9% Isopropyl Alcohol

The only liquid we recommend. 99.9% pure, meets our 99% requirement.

[Shop on Amazon ›](#)



CLOTHS

HDX Easy-Tear Microfiber Cloth Roll

50 soft microfiber cloths, 12 in. x 12 in.

[Shop at Home Depot ›](#)

Some links are affiliate links. If you buy through them, we may earn a small commission at no extra cost to you.

YOUR 2-YEAR WARRANTY



Your smart film installation is backed by our 2-year warranty. Following these cleaning instructions keeps that coverage valid. Failure to follow them voids the warranty.

STEP BY STEP

Four steps to a clear finish



STEP 1

Get two clean, dry microfiber cloths.

One cleans and one dries, so streaks never spread. HDX microfiber cloths (Home Depot).

1



STEP 2

Put a little 99% isopropyl alcohol on the first cloth.

Apply it to the cloth, never directly on the film. MaxTite 99.9% isopropyl alcohol (Amazon).

2



STEP 3

Wipe gently in light, straight strokes.

Overlap each pass slightly and let the cloth do the work. Do not scrub.

3



STEP 4

Dry right away with the second cloth.

Drying at once prevents streaks. Do not leave liquid sitting along the edges.

4

INSTALLED BY OUR TEAM

Your film looked perfect on installation day.

THE RULES

Do and don't



DO

- ✓ Clean only with a microfiber cloth and 99% isopropyl alcohol
- ✓ Apply the alcohol to the cloth, not the film
- ✓ Keep transformers powered and dry
- ✓ Use your film as usual, with the switch or remote



DON'T

- ✗ Use ammonia-based, abrasive or chemical cleaners
- ✗ Use scrapers or pressure washers
- ✗ Put tape, stickers or other films on the smart film
- ✗ Spray liquid directly onto the film



SOMETHING LOOK OFF?

We are one call away.

Film flickering, not switching, or edges lifting? Mon–Fri, 8am–6pm.

(305) 833-7887

QUESTIONS WE HEAR

Smart film cleaning FAQ

Can I use Windex or other glass cleaner on smart film?

No. Many glass cleaners contain ammonia, and our instructions rule out ammonia-based cleaners on smart film. Use only a microfiber cloth and 99% isopropyl alcohol.

Can I clean smart film with soap and water?

Our instructions call for a microfiber cloth and 99% isopropyl alcohol only. To keep your warranty valid, stick to that method.

How often should I clean smart film?

Whenever you see fingerprints or smudges. There is no fixed schedule. Wipe gently with a cloth dampened with alcohol, then dry.

Can I use paper towels or a sponge?

No. Use microfiber only. Paper towels and abrasive pads can damage the surface.

Where can I buy the products you recommend?

We recommend MaxTite 99.9% isopropyl alcohol on Amazon and HDX Easy-Tear microfiber cloths at Home Depot.

My smart film flickers or won't switch. What should I do?

Call us at (305) 833-7887 and we will take care of it. Keep the transformer powered and dry in the meantime.



Thank you for choosing smart film.

Thank you for trusting us with your glass. With gratitude, the Deluxe Smart Film team.

(305) 833-7887 · deluxesmartfilm.com/quote