



Load the laundry.

Open the door and place the laundry in the machine. Make sure you don't overfill the machine - you can test this by putting one hand in. If your palm doesn't fit, take some of the garments out or move to a larger machine.

Close door.

Select drying cycle.

Based on the guidance on your garment's fabric care label, choose the cycle on the machine.

To pay, either tap with your phone or card.

Press start.



Empty Pockets

Open the door and place the laundry in the machine. Make sure you don't overfill the machine - you can test this by putting one hand in. If your palm doesn't fit, take some of the garments out or move to a larger machine.

Close door.

Detergent and softener will dispense itself.

Select wash cycle.

Based on the guidance on your garment's fabric care label, choose the cycle on the machine.

To pay, either tap with your phone or card.

Press start.