



time2

Outdoor Siren

User Guide

Protect and monitor all
that you love and value

 
Contents

1	What's in the box
2	Get Started
3	Download App
4	Register
6	Add a Home
8	Add Outdoor WiFi Siren
11	Dashboard
12	Alarm Mode
13	Siren Settings
14	Pair with Noah - Siren on
19	Pair with Noah - Siren off
24	Reset
25	Installation

Struggling to read?

View this start up guide online at
time2technology.com/manuals

What's in the box

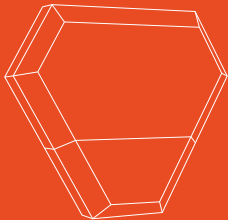

- Outdoor WiFi Siren
- Power Adapter



- Wall Mounting Screws
- Start Up Guide

Be ready

 
You will need your WiFi router password. Write it down below so its handy when you need it!

Get Started

Please complete set up before mounting the siren.



Connect the siren to the mains using the power adapter provided.

Open the back cover of the siren and press the blue power button. The red LED light will come on and the siren will beep before it is ready to connect.

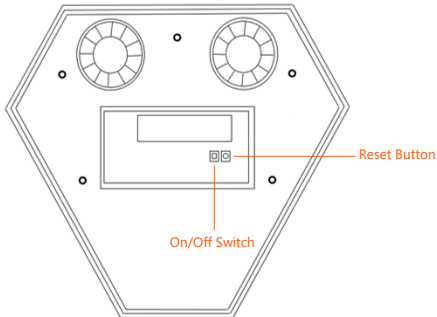


Download App

  Download the “Clan at home” App on the iOS App Store or Google Play Store

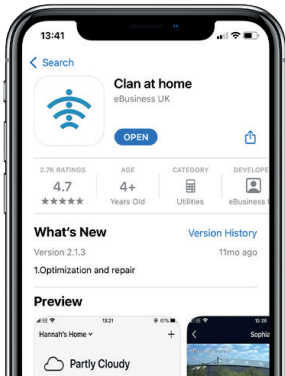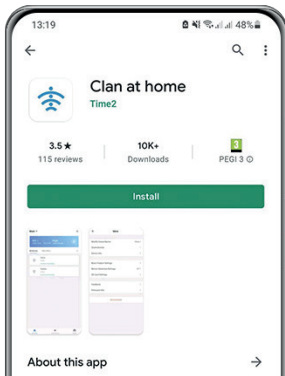


Register

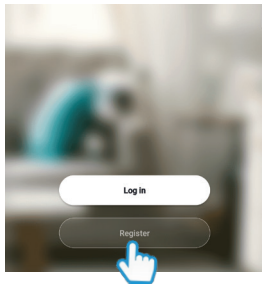

Step 1

Open the app then press
Register

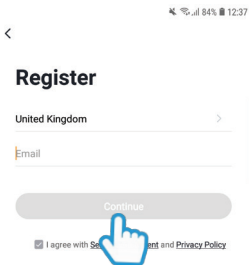

Step 2

Enter your email address

Register



Verification Code

Verification code has been sent to: 0123456789 , Resend
(52s)

Step 3

Enter the verification code
sent via email



Set Password




Password must contain 6-20 letters and numbers



Step 4


Create your password to login

Add a Home

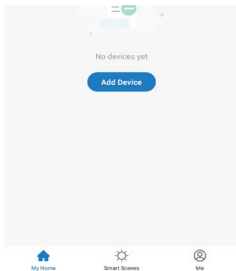

Step 1


Click Me in the bottom right hand corner

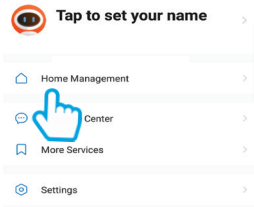

Step 2


Select Home Management

Add a Home

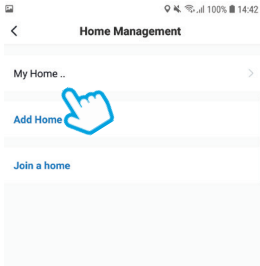

Step 3

 
Select My Home. Enter a name for your home and a location. Click Save

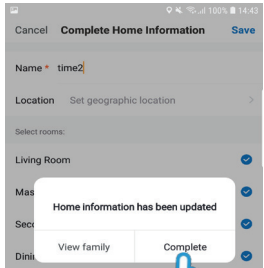

Step 4


Select Complete and your home will be created

 Add Outdoor WiFi Siren

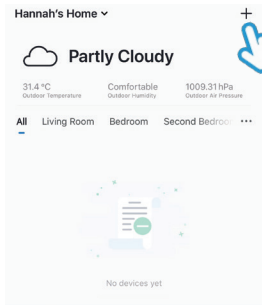

Step 1

 
In My Home, click the (+) icon in the top right-hand corner of the screen

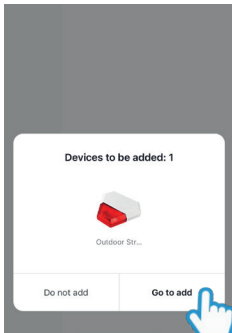

Step 2

Select Go to add

 Add Outdoor WiFi Siren

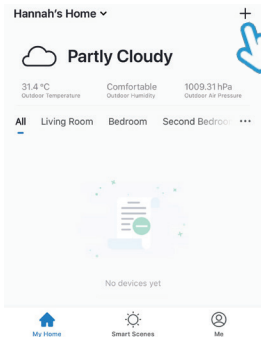

Step 3

Click (+) icon

 
If your Wi-Fi is 5GHz, please set it to be 2.4GHz.
[Common router setting method](#)



Step 4

Enter your WiFi router password.
Then press Confirm.


Add Outdoor WiFi Siren

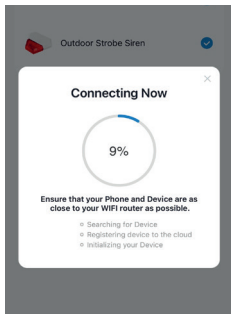

Step 5

The siren will then establish a connection to Clan.

 You will hear a single beep.

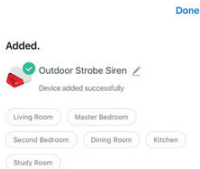


Step 6

Once connected you can rename the siren.

Then press Done.

 Dashboard

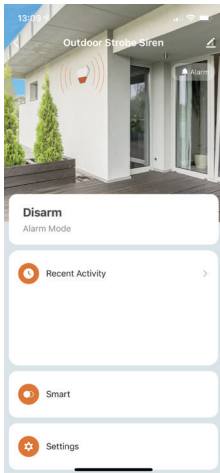

See device information

Activate siren manually

 
Log of recent activity

See smart automation rules

See settings

Alarm Mode

The siren has three modes

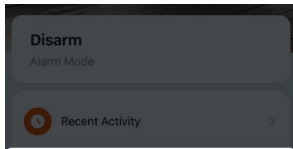

Alarm Mode

Sound Alarm



Activate siren only

Light Alarm



Activate strobe light only

Sound & Light Alarm



Activate both siren and strobe light

Disarm

 


Deactivate the siren

Cancel

Confirm

Siren Settings

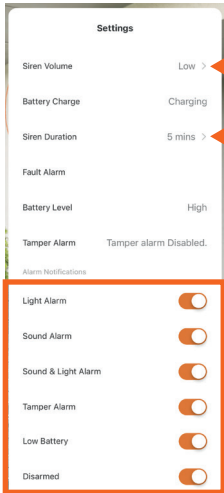


Set siren volume

Set the siren duration


Choose which alerts you'd like to receive

 Pair with Noah - Siren on

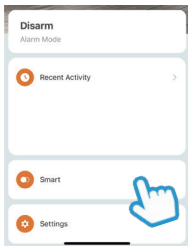


Step 1

 Click Smart

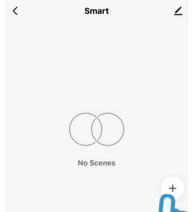

Step 2

 
Then click (+)

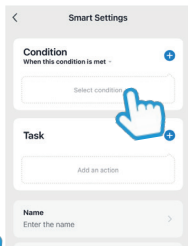

Step 3


Click Select Condition

 Pair with Noah - Siren on

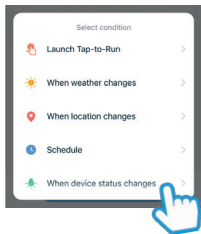


Step 4

 Select When device status changes

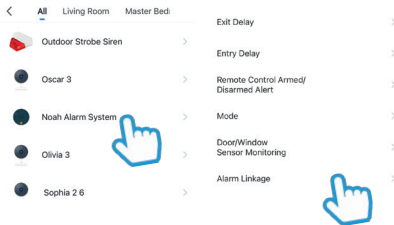

Step 5

 
Choose Noah Alarm System

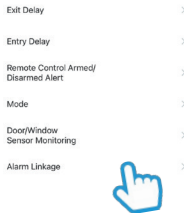


Step 6

Select Alarm Linkage

 
Pair with Noah - Siren on

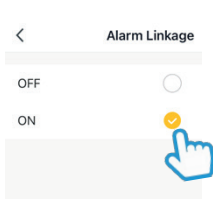

 Step 7
Select On

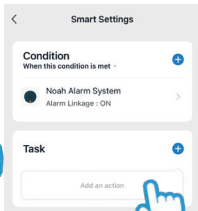


 Step 8
Click Add an action

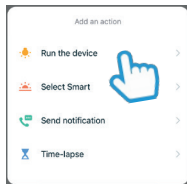


Step 9
Select Run the device

 Pair with Noah - Siren on

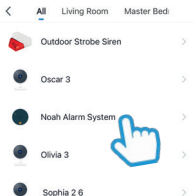


Step 10

 Choose Outdoor Siren

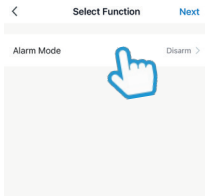

Step 11

 Click Alarm Mode

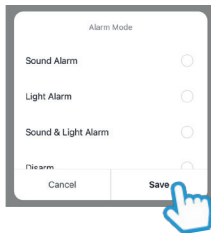


Step 12

Choose an alarm option


Then click Save

 Pair with Noah - Siren on

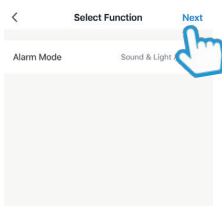


Step 13

 Click Next

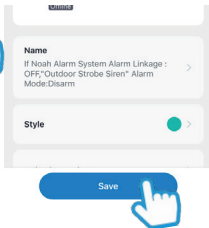

Step 14

 
Add a name then press Save

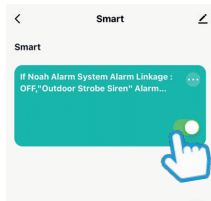

Step 15


The smart automation can be activated or deactivated with a click of a button

 Pair with Noah - Siren off

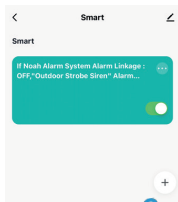


Step 1

 Click (+)

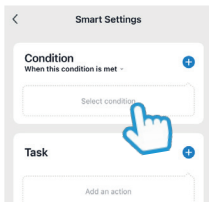

Step 2

 
Click Select Condition

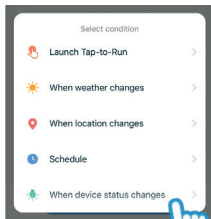

Step 3


Select When device status changes

 Pair with Noah - Siren off

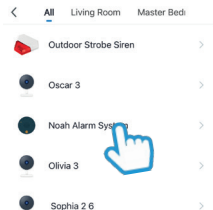


Step 4

 Choose Noah Alarm System

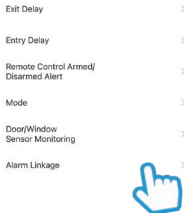

Step 5

 
Select Alarm Linkage

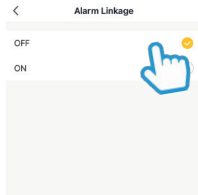

Step 6


Select Off

 Pair with Noah - Siren off

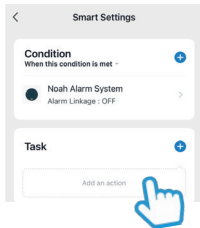


Step 7

 Click Add an action

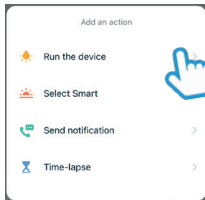

Step 8

 
Click Run the device

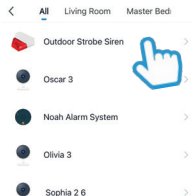

Step 9


Choose Outdoor Siren

 Pair with Noah - Siren off

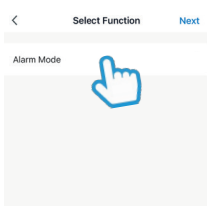

Step 10

 
Click Alarm Mode

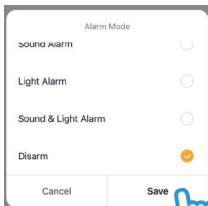

Step 11

Click Disarm

 
Then click Save

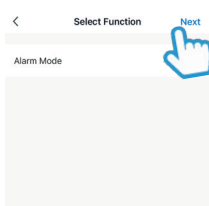

Step 12


Click Next

 Pair with Noah - Siren off

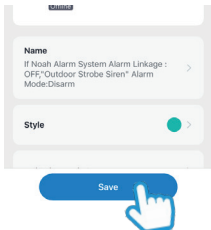

Step 13

 Customise the name and click Save

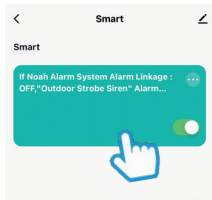

Step 14

 
The smart automation can be activated or deactivated with a click of a button

Reset

If you are having trouble connecting to the siren you may need to do a reset.

How to reset the siren?


Hold down the learn button on the back of the siren for up to 15 seconds until you hear it beep and the LED is flashing red.

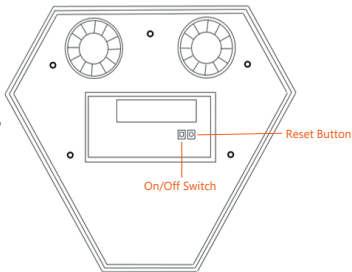

Installation

To install the outdoor siren, see steps below:

1. Use a piece of paper to create a screw template for the siren and mark the correct screw positions onto the wall.

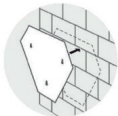


2. Using the screw template, drill the screws into the wall.



3. Connect the siren to a main power supply using the charging adapter provided.



4. Finish mounting by fixing the siren on to the screws and position into place.

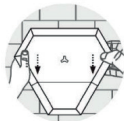

Be a part of Clan

Are you on Facebook? Join our Clan to speak to other members of the Clan and our dedicated UK based support team:

www.facebook.com/groups/partoftheclan

Need further Help?

Contact our Customer Support team on Social Media



facebook.com/time2HQ



m.me/time2HQ



[@time2HQ](https://twitter.com/time2HQ)

or visit our support page

time2technology.com/support